



Silicon Seeding on Deep Trench Wafers

AVP 8000

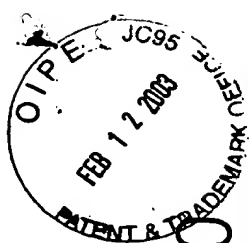


Variation of the Preclean: Influence on Grain Density and Height





CLEAN WET PIRANHA only

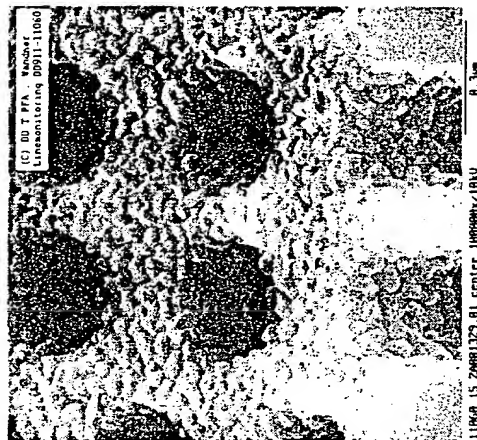

CLEAN WET DFF/HUANGMEGASONIC

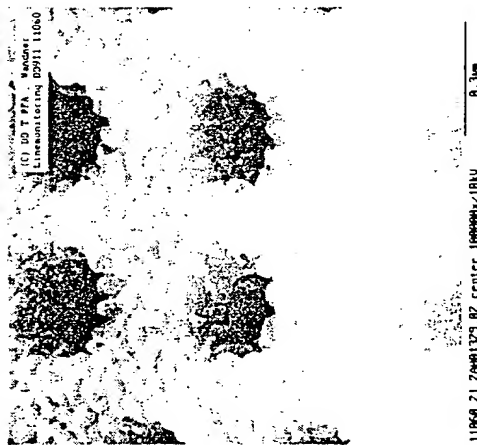

HF LAST → größere Körner

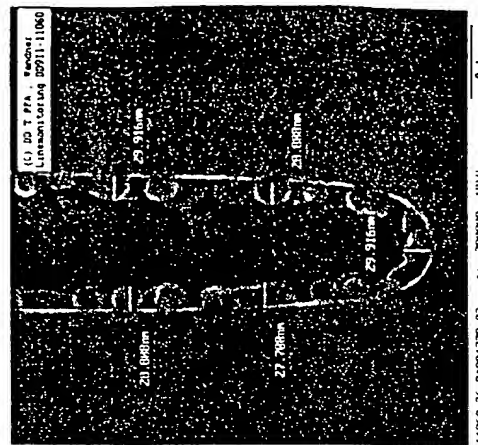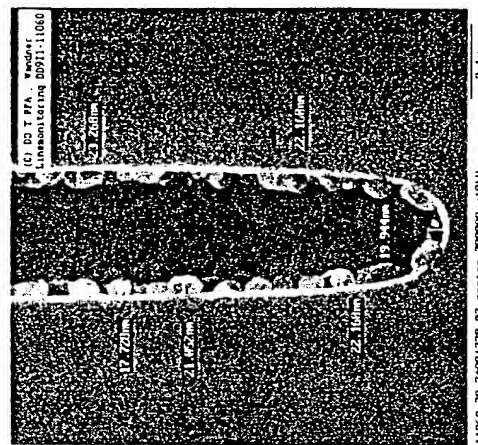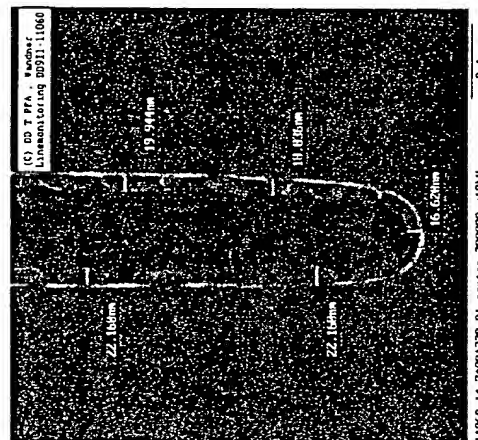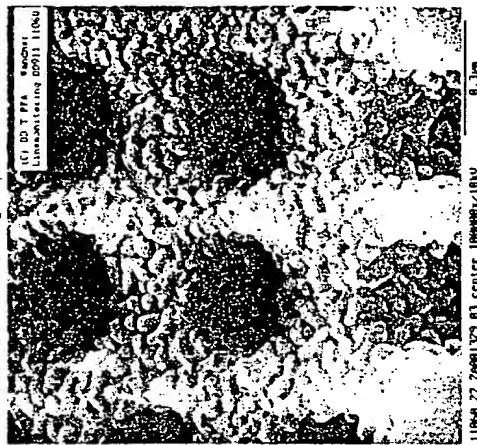

Company Confidential

BEST AVAILABLE COPY